

PW-120 Heater Proofer

This manual contains important information regarding your *Admiral Craft* unit. Please read this manual thoroughly prior to equipment set-up, operation and maintenance. Failure to comply with regular maintenance guidelines outlined in this manual may void the warranty. MUST READ!!!

The Heater-Proofers are aluminum transport cabinets with heaters that function as a hot food holding cabinet and/or as a proofing cabinet for commercial kitchens. The heat drawer slides into place on the lower ledges of the heating cabinet. A power cord is provided and attached to the heat drawer through an access hole in the back of the cabinet.

The thermostat control knobs are mounted to the left and right of the HEAT/PROOF switch. The left thermostat knob controls the heat in the cabinet from 1 to 9. The right thermostat knob controls the humidity from 1 to 9. Please see below for humidity and thermostat ranges for this unit.

When the power switch is in the ON position, the circulating fan and element will run continuously until switched off.

WARNINGS

- Cabinet will hold food hot at a constant temperature
- Will supply humidity for proofing when the application applies
- This cabinet is not a cooking appliance

UNPACKING

1. Examine the interior and exterior to determine if any damage has occurred during delivery
2. Examine the interior of the unit to make sure all packing materials are removed before the unit is plugged into an electrical outlet

INSTALLATION

1. Position unit on a stable, level surface
2. Plug the cord into any grounded 120-volt AC, 15 amps power supply dedicated breaker
3. It is highly recommended the only power supply cord provided be used
4. Do not operate with an extension cord

MAINTENANCE – NOTE: The equipment has been designed to require minimum maintenance and has been constructed to meet National Sanitation Foundation and U.S. Public Health Service standards

1. Disconnect the cord from the outlet.
2. To avoid damage, do not use abrasive cleaners or scouring pads.
3. Non-toxic chemical cleaners or mild detergents are recommended for cleaning fixtures
4. Hosing or steam cleaning should not be necessary to keep fixtures clean and sanitary
5. Do not allow water or steam to come in contact with electrical components
6. Never power wash or steam clean the cabinet with the power drawer inserted

OPERATING INSTRUCTIONS – NOTE: The internal circulation blower and 1000w heater element (controlled with the Heat Thermostat) will operate continuously when the power switch is turned on.

1. Push main power switch (ON/OFF rocker) to ON position
2. Push HEAT/PROOF switch to HEAT for heating ONLY
3. Turn HEAT thermostat knob fully clockwise for preheat
4. Allow 45 minutes for pre-heating, then turn thermostat to desired setting
5. Place water in the water pan filling to about ¾ full, for proofing
6. For proofing, push HEAT/PROOF switch to PROOF
7. Adjust the heat and humidity thermostat knob to control desired temperature and humidity. Allow 45 minutes for pre-heating

HEAT THERMOSTAT

- The controlling range is 80°F to 185°F
- The dial numbers 1 thru 9, do not relate to a specific calibrated temperature
- Temperature settings must be obtained through familiarization with the unit
- The dial also has an OFF position to turn heater unit off

HUMIDITY THERMOSTAT

- To control humidity range from 30% to 100%, humidity settings must be obtained through familiarization with the unit
- The dial numbers 1 thru 9 do not relate to a specific calibrated humidity
- The dial also has an OFF position to turn humidity off
- To maintain low heat range between 85°F and 100°F, switch to proof mode and adjust heat knob to desired heat range
- Allow 45 minutes to pre-heat in proof cycle

SPECIFICATIONS

 
| Model | Description | Wattage | Voltage | Amps |
|--------|------------------------|---------|-----------|------|
| PW-120 | Heater Proofer Cabinet | 1800W | 120V/60Hz | 15 |

DIMENSIONS AND WEIGHTS

| Net Weight | Gross Weight | Overall Dimensions | Cabinet Dimensions |
|-----------------|-----------------|--------------------------|--------------------------|
| 112 lbs (51kgs) | 148 lbs (67kgs) | 21"W x 31.25"L x 67.25"H | 18"W x 26.25"L x 52.75"H |

 
Thank you for purchasing this Adcraft equipment
Admiral Craft Equipment Corp • 940 S. Oyster Bay Rd. • Hicksville, NY • 11801
Phone: 800-223-7751 • Fax: 800-447-7751
www.admiralcraft.com

PW-120

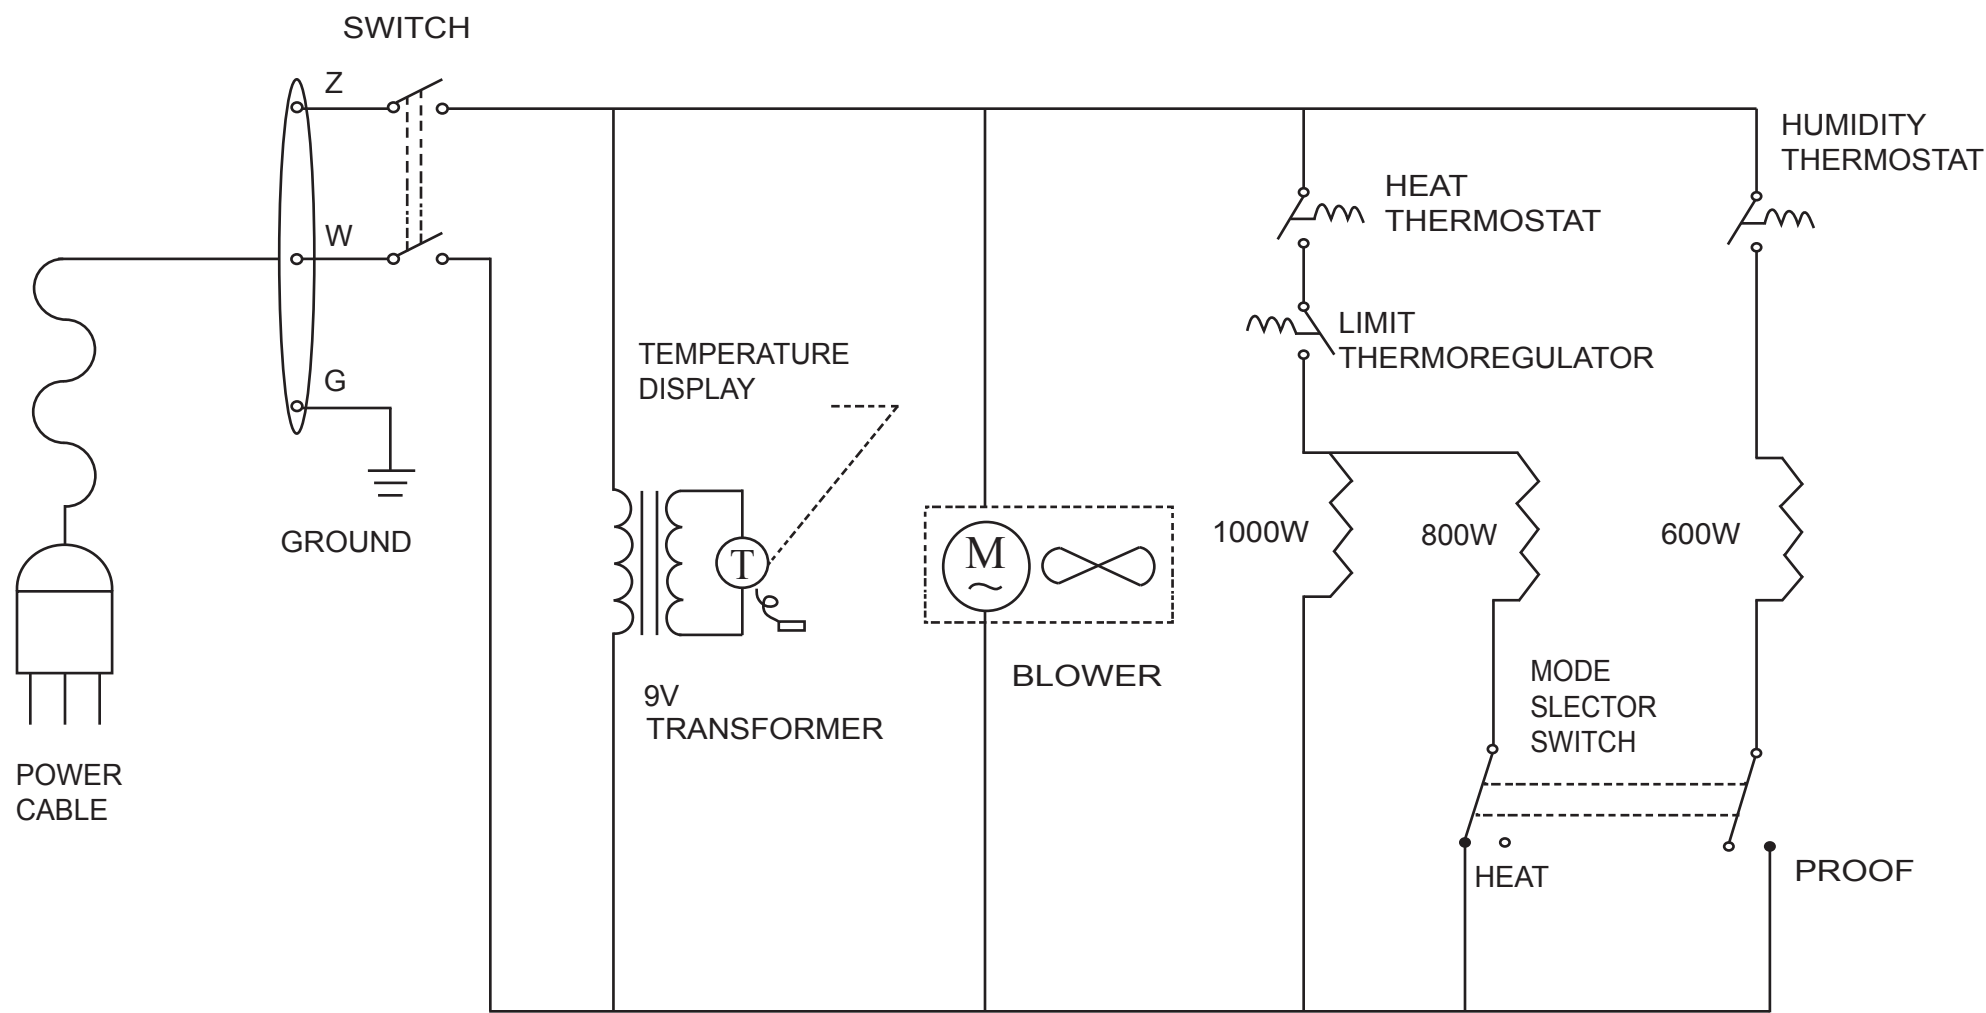







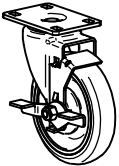

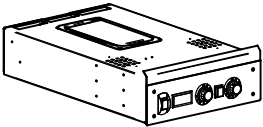
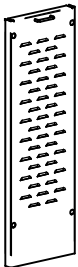
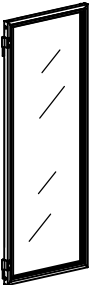
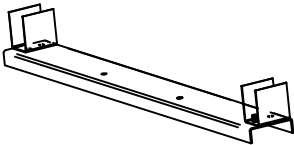
Heater Proofer Cabinet Assembly Instructions

PW-120 Heater Proofer Cabinet Parts Layout






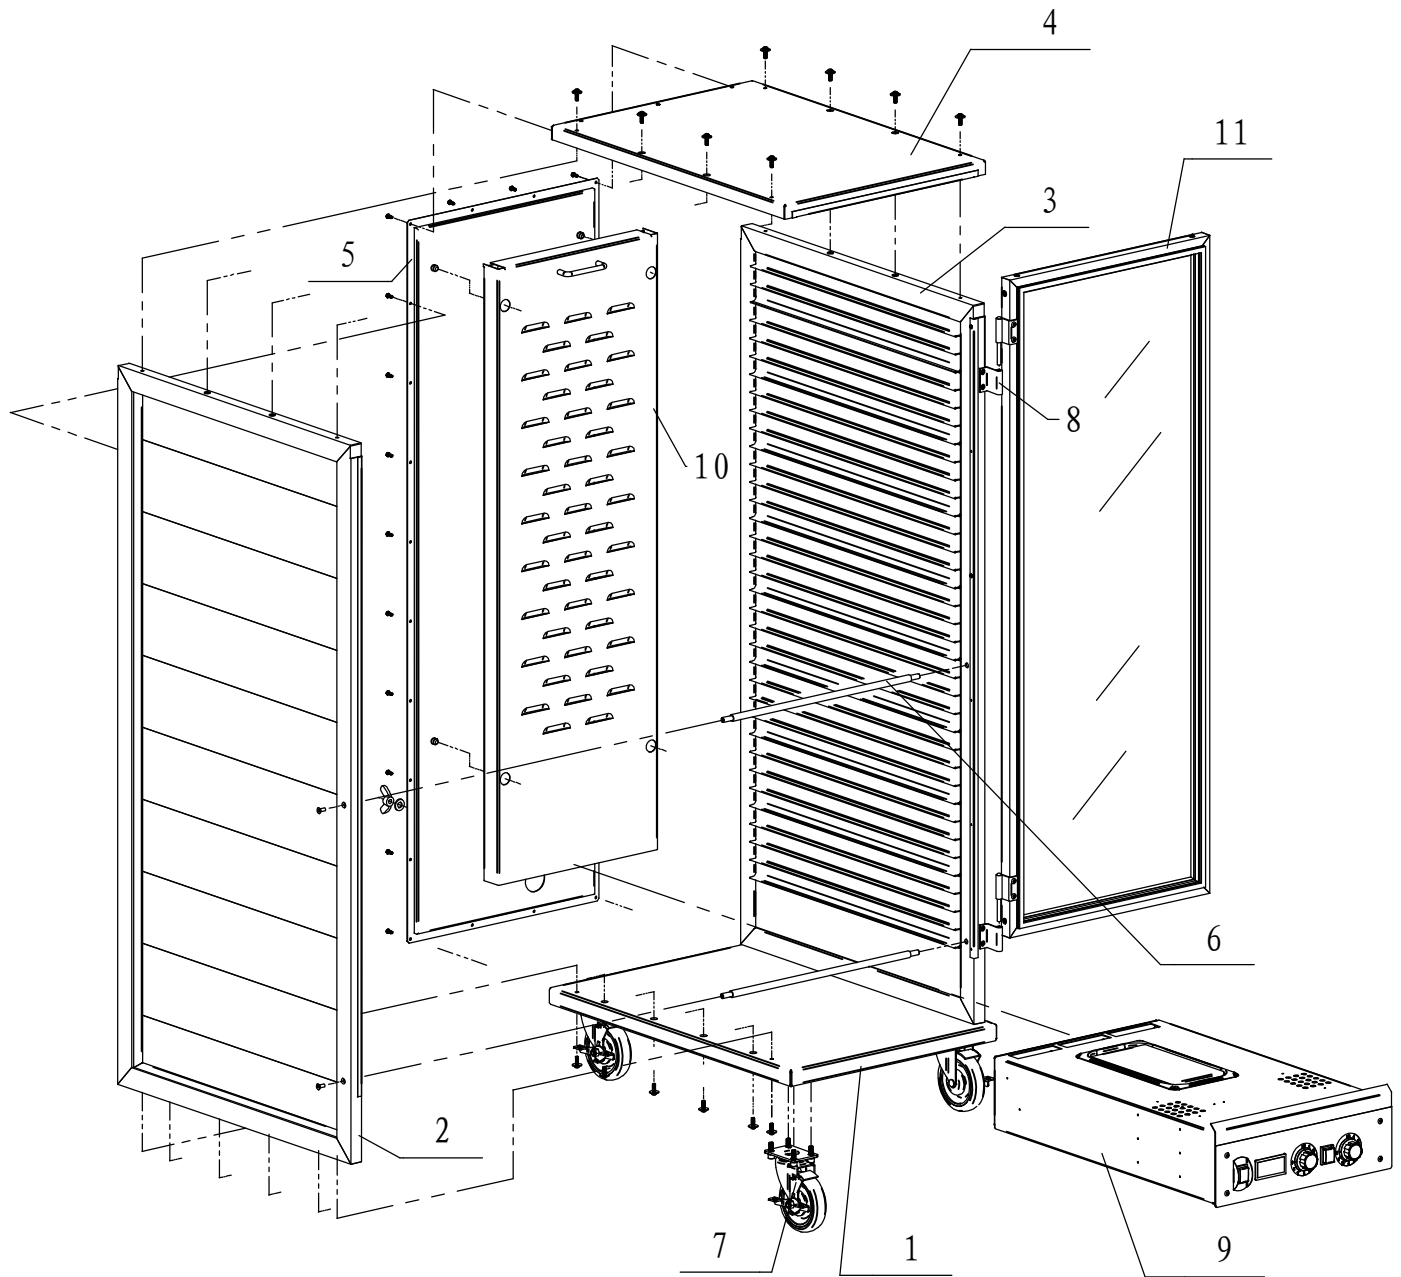


Please read the assembly instructions before putting together



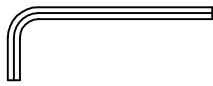
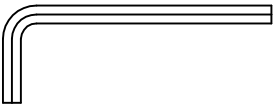
Parts Listing and Drawing Numbers
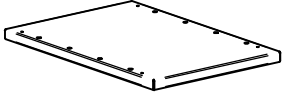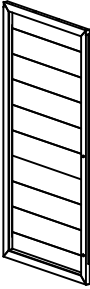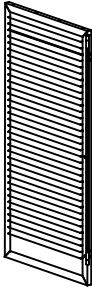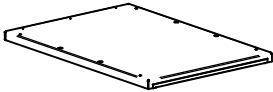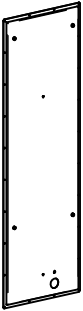
| | | |
|---|---|---|
| <p>1. Bottom Board</p>  <p>Quantity 1 piece</p> | <p>2. Left-side cabinet Board</p>  <p>Quantity 1 piece</p> | <p>3. Right-side cabinet Board</p>  <p>Quantity 1 piece</p> |
| <p>4. Head Cover</p>  <p>Quantity 1 piece</p> | <p>5. Back Panel</p>  <p>Quantity 1 piece</p> | <p>6. Doorframe Bracing Piece</p>  <p>Quantity 2 pcs</p> |
| <p>7. Universal Wheel</p>  <p>Quantity 4 pcs</p> | <p>8. Shutter of the Cabinet Body</p>  <p>Quantity 2 pcs</p> | <p>9. Heater</p>  <p>Quantity 1 piece</p> |
| <p>10. Wind Deflector</p>  <p>Quantity 1 piece</p> | <p>11 Transparent Door</p>  <p>Quantity 1 piece</p> | <p>12 Installation Auxiliary Parts (used when needed in installation)</p>  <p>Quantity 2 pcs</p> |

Parts and Components

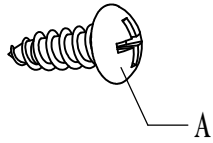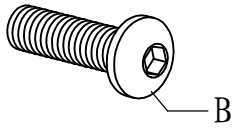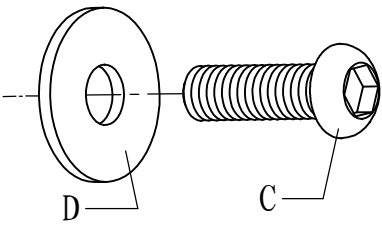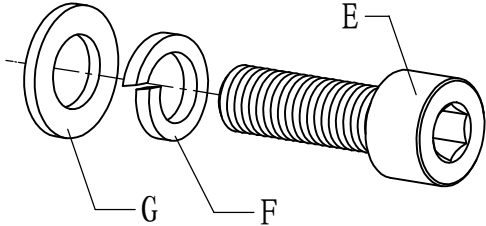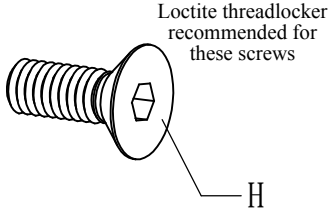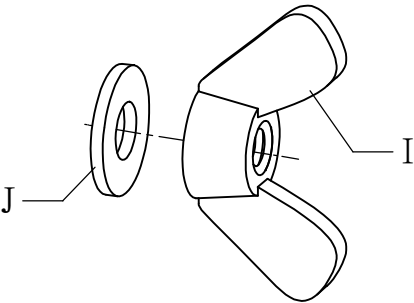
| Number | Items for Installation (the specifications for Standardized Parts and Components) | Figures | Tools | Quantity /Set |
|-------------|---|--|-------|------------------|
| A | Back Panel (tappingscrewST4.2×13) |  | LP | 24 |
| B | Shutter of the Cabinet Body (pan head screw M5×20) |  | BS3 | 4 |
| C D | Bottom Board and Head Cover (socket head cap screw M6× 20) (big flat washer 6) |  | BS4 | 20 |
| E F G | Universal Wheel (hex head screw M8×22) (spring washer 8) (flat washer 8) |  | BS6 | 16 |
| H | Doorframe Bracing Piece (sunk screw M6×16) |  | BS4 | 4 |
| I J | Heater (butterfly nut 5) (flat washer 5) |  | | 1 |

Assembly Tools

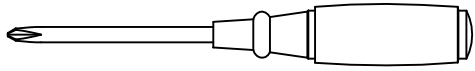
| Number | Name | Figures | Quantity |
|--------|-----------------------------|--|----------|
| LP | Crosshead Screwdriver |  | 1 |
| BS3 | Internal Hexagonal Wrench 3 |  | 1 |
| BS4 | Internal Hexagonal Wrench 4 |  | 1 |
| BS6 | Internal Hexagonal Wrench 6 |  | 1 |

- Before assembly please check that all parts for the heater proofer are included and not damaged.
- Please follow instructions carefully.
- Do not tighten the screws all the way in steps 1-5. After positioning the back panel (part 5) in step 6, then its okay to tighten the screws fully.

 
- ① Bottom board strap stiffener(temporary component), Left-side and right-side cabinet boards, Doorframe bracing piece

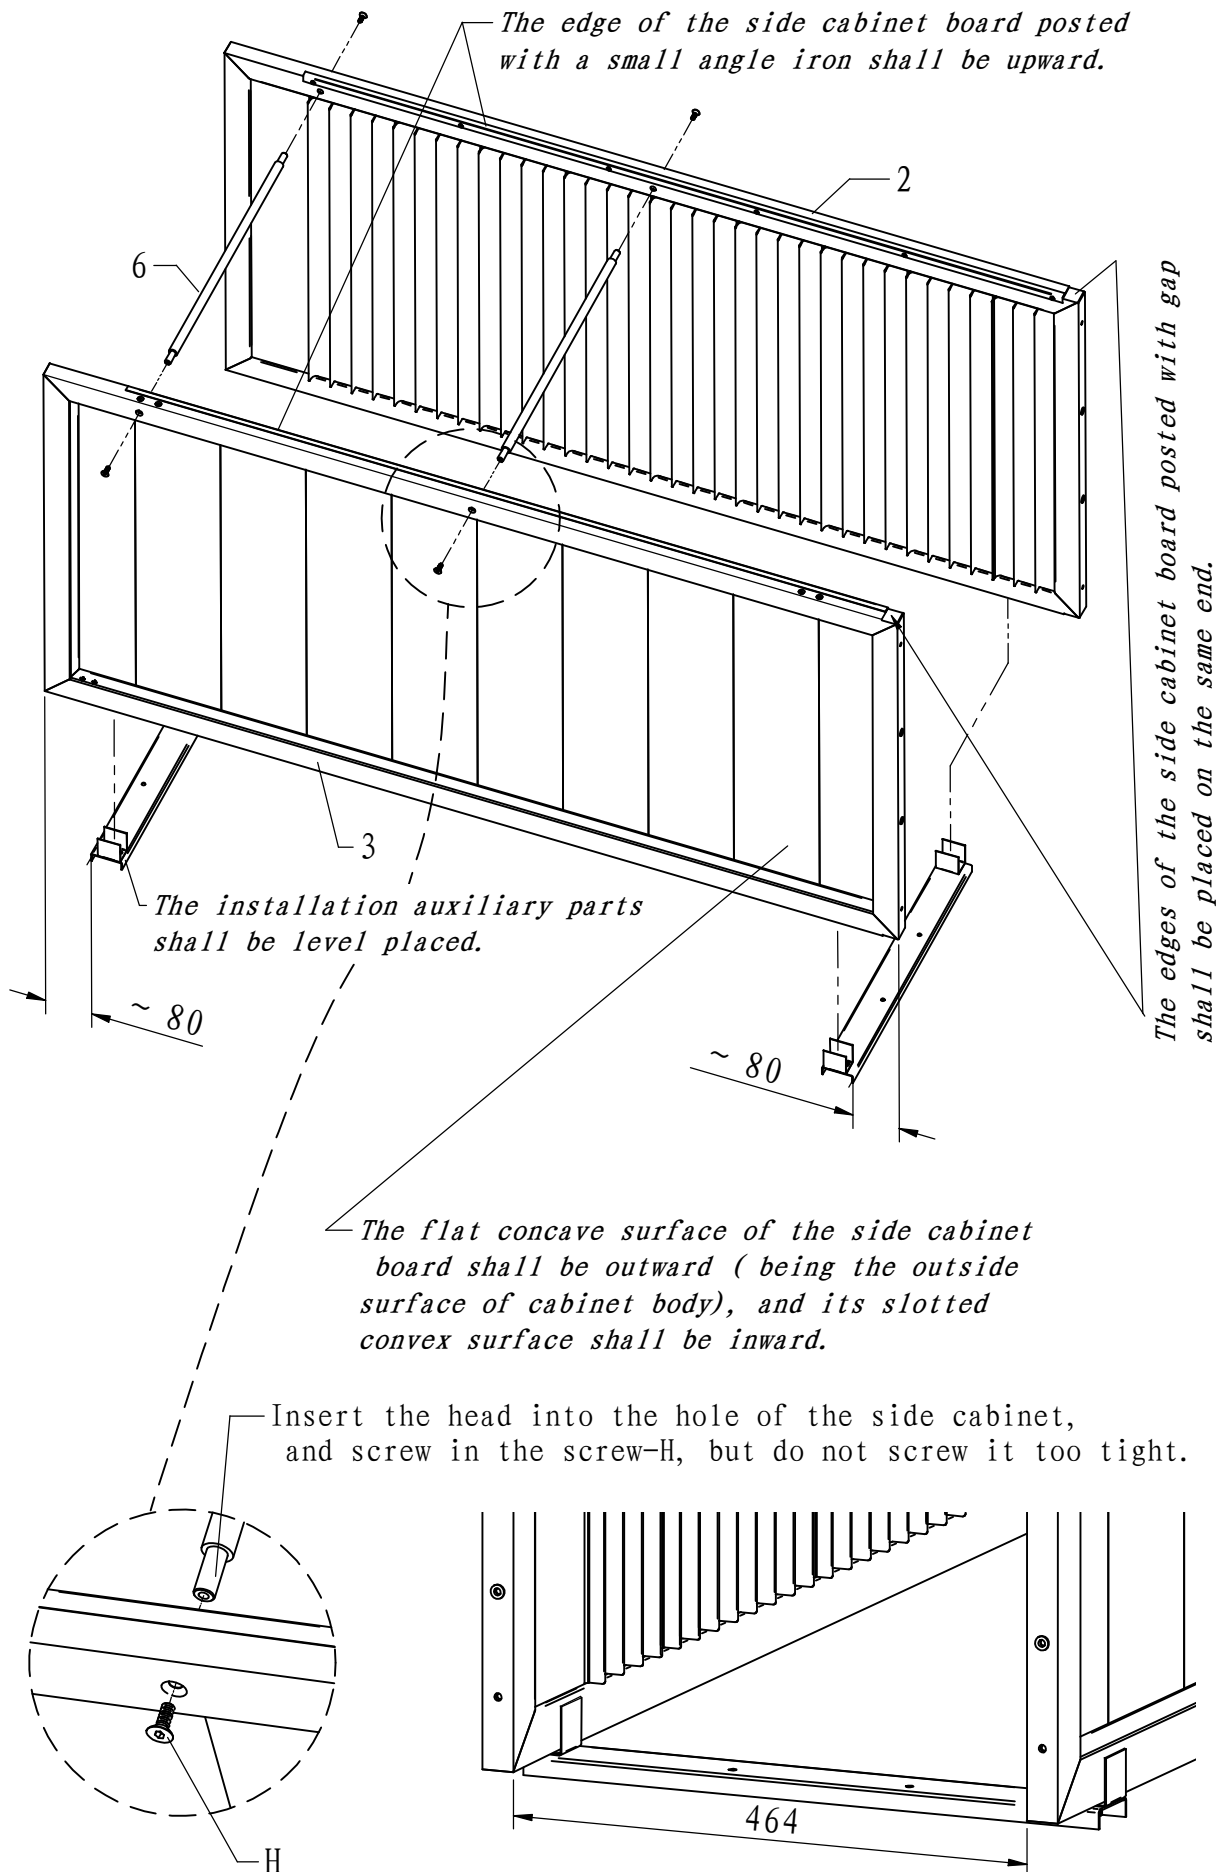


② Head cover

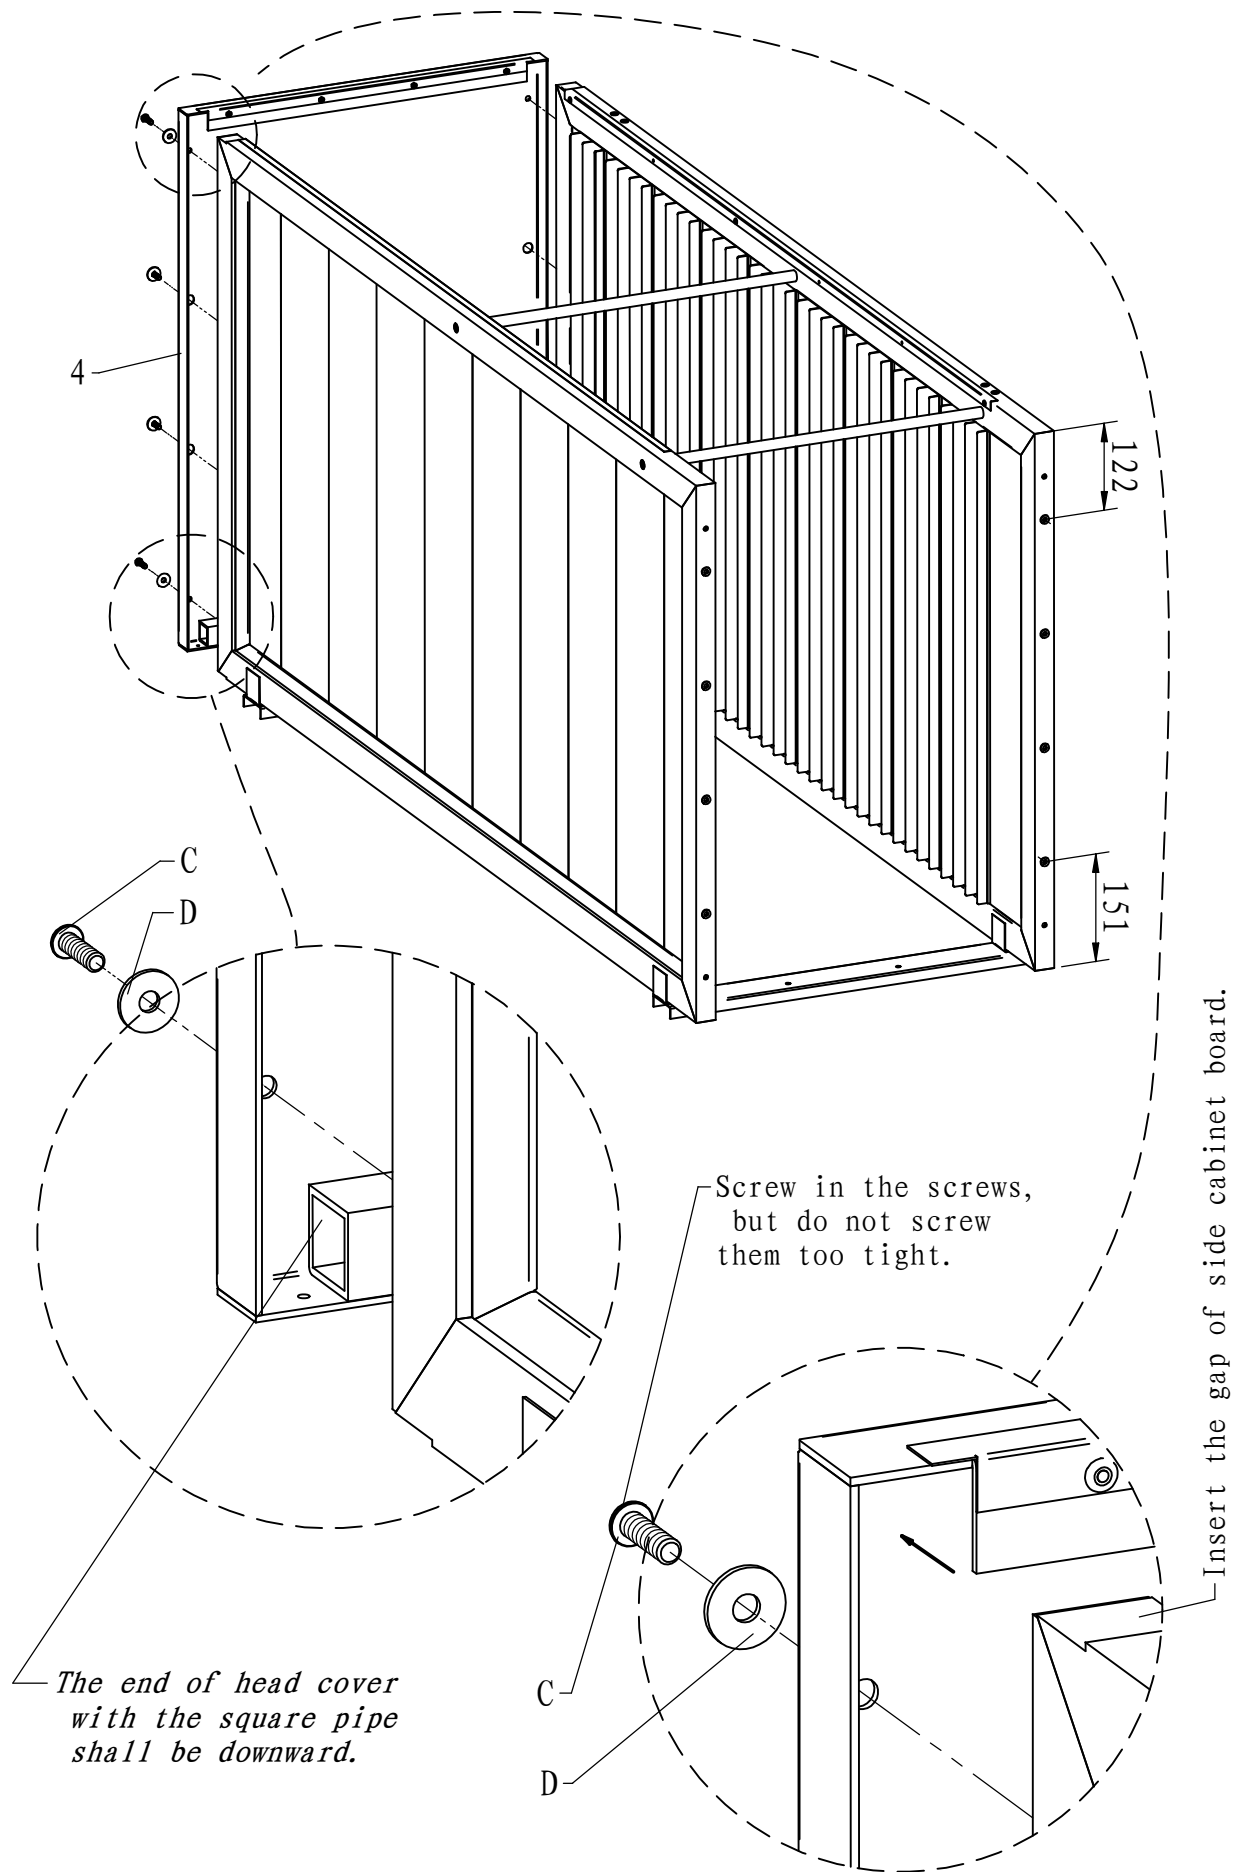 


③ Bottom board

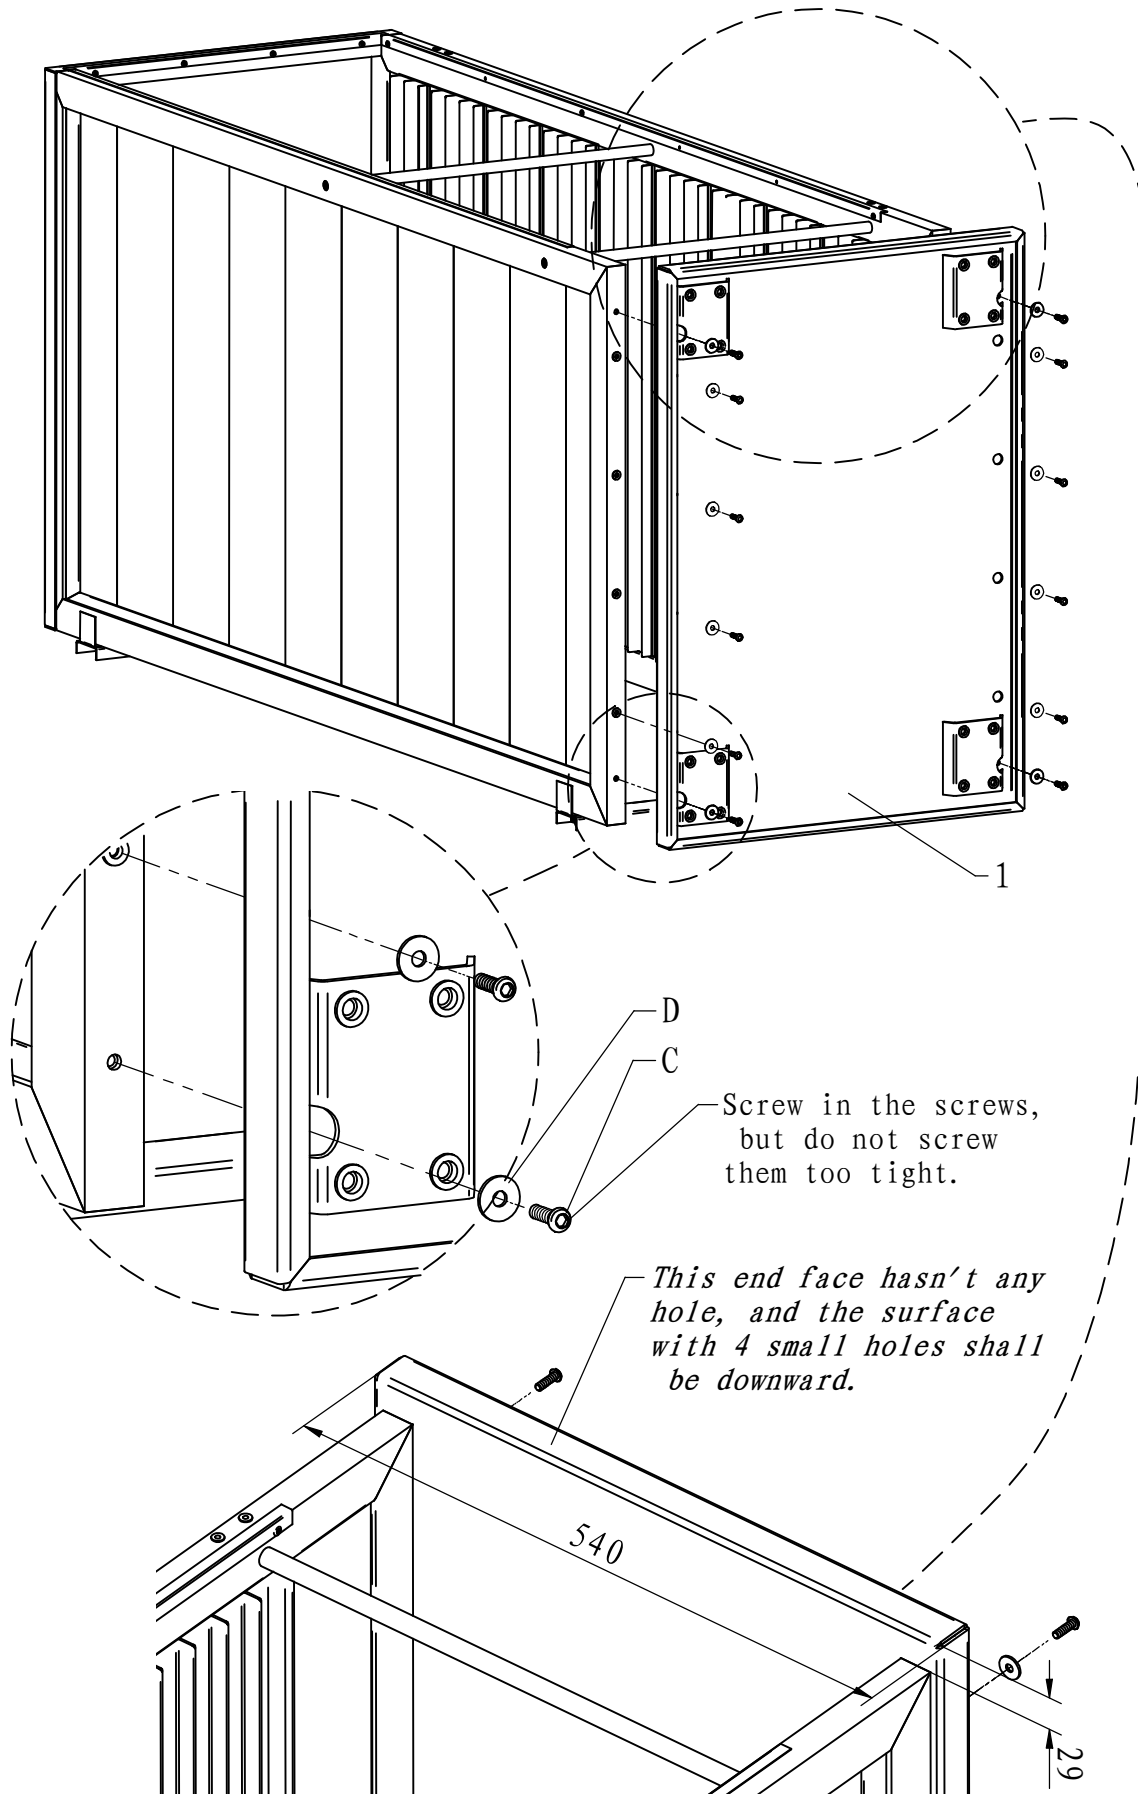 

④ Universal wheel

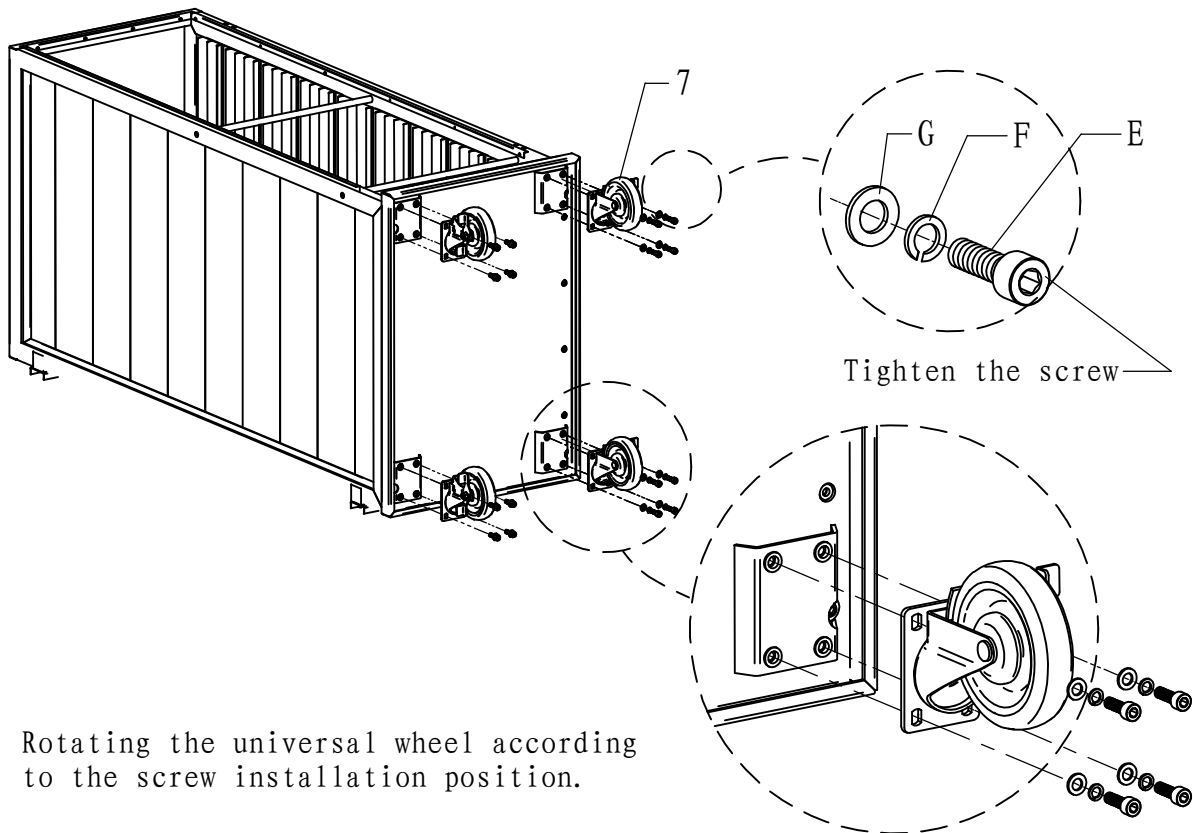 


 ⑤ Disassembling the installation auxiliary parts

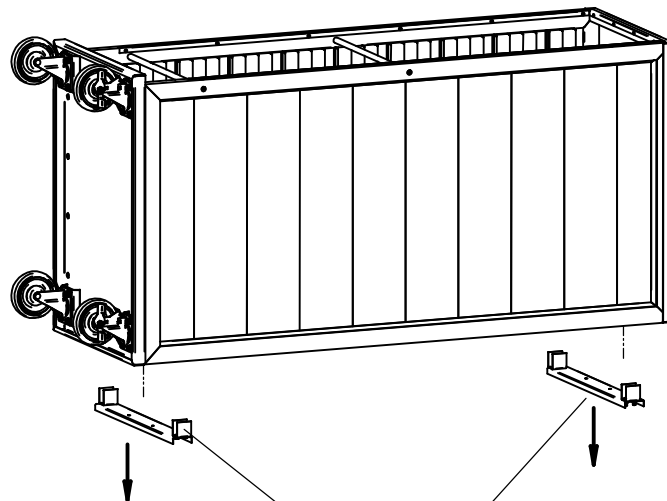


Disassembling the installation auxiliary parts

 
⑥ Back panel

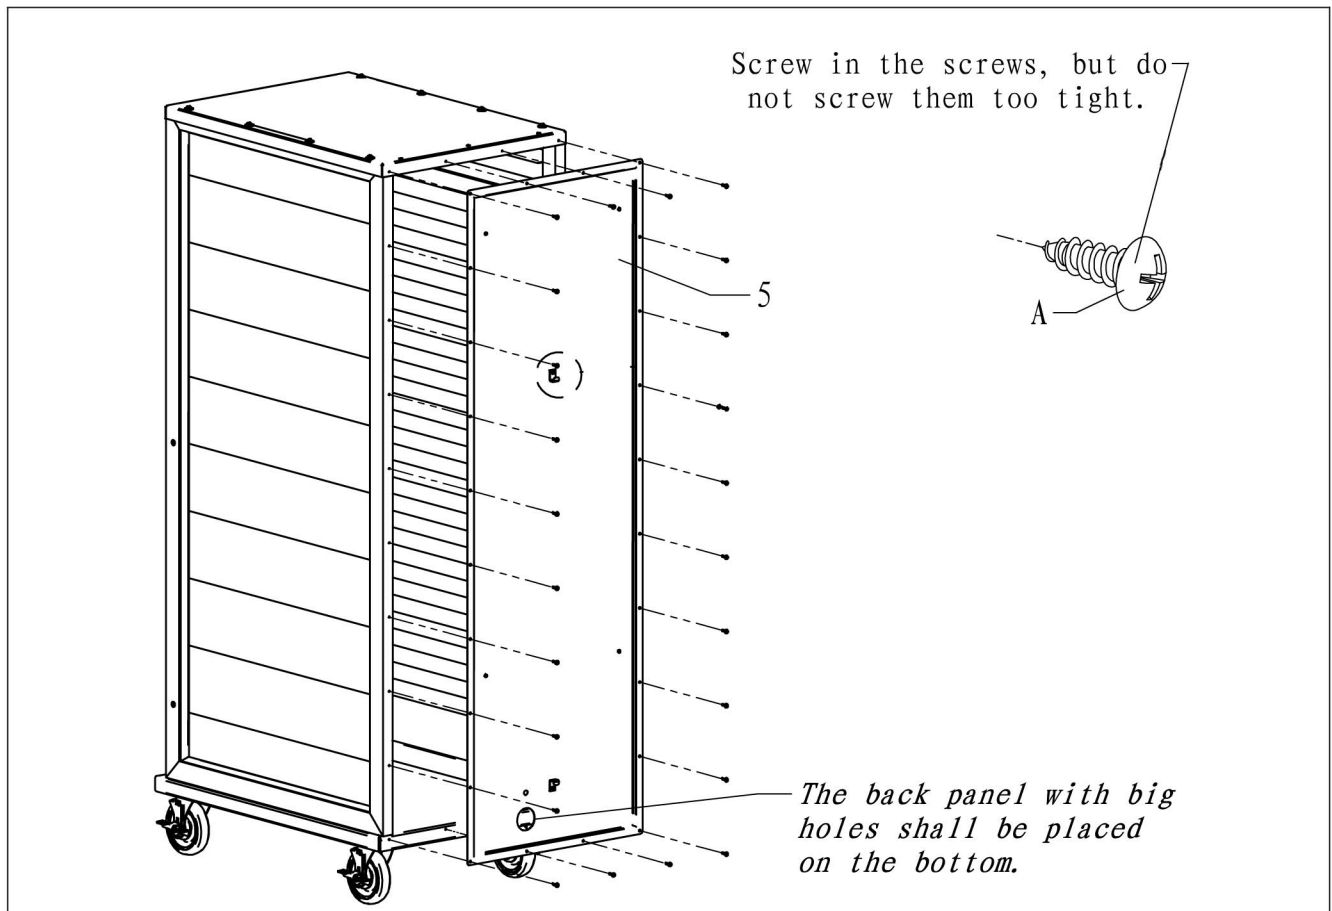

 
⑦ Tightening up all the screws marked as below

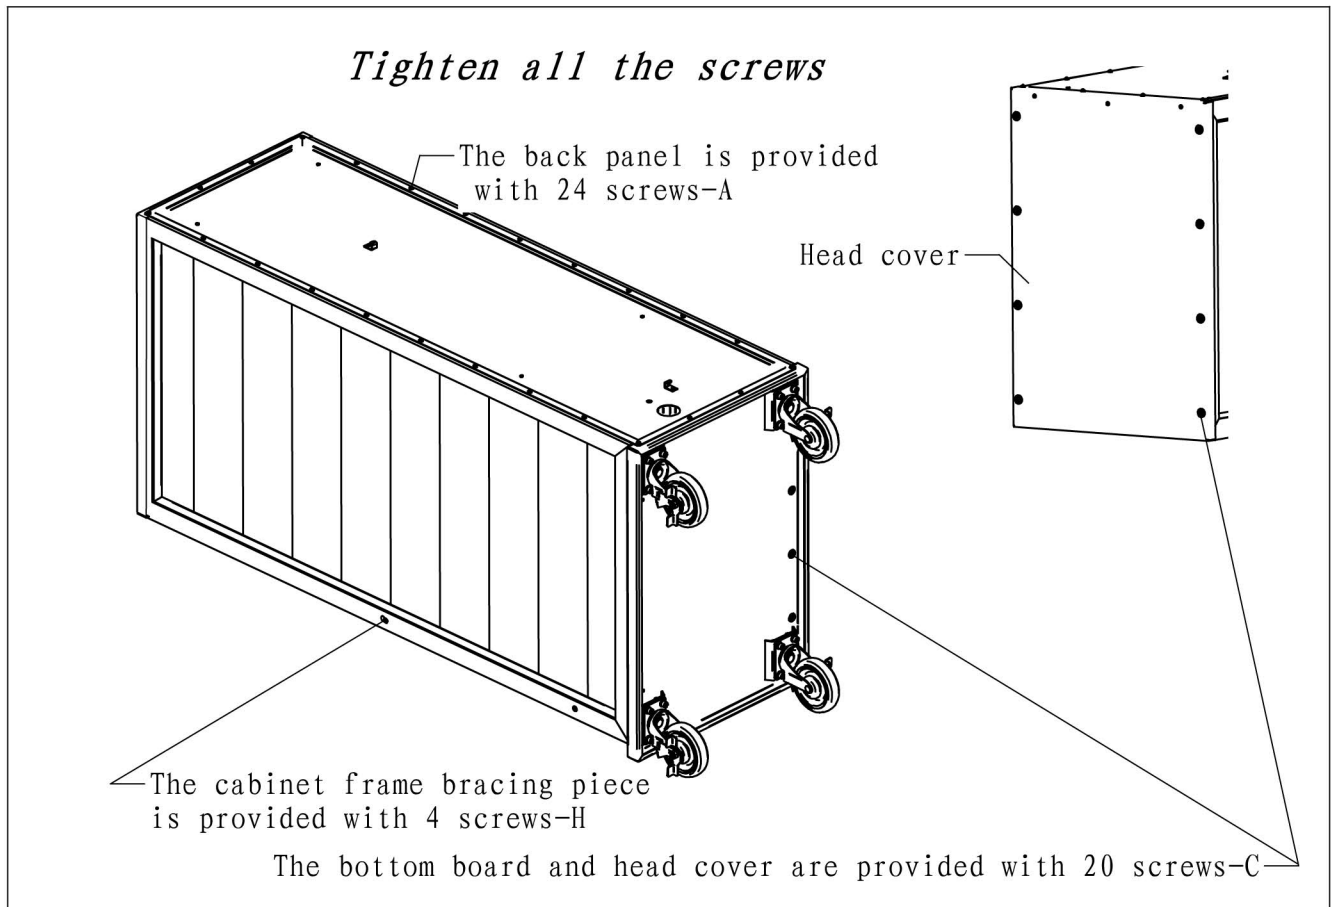


⑧ Shutter of the cabinet body

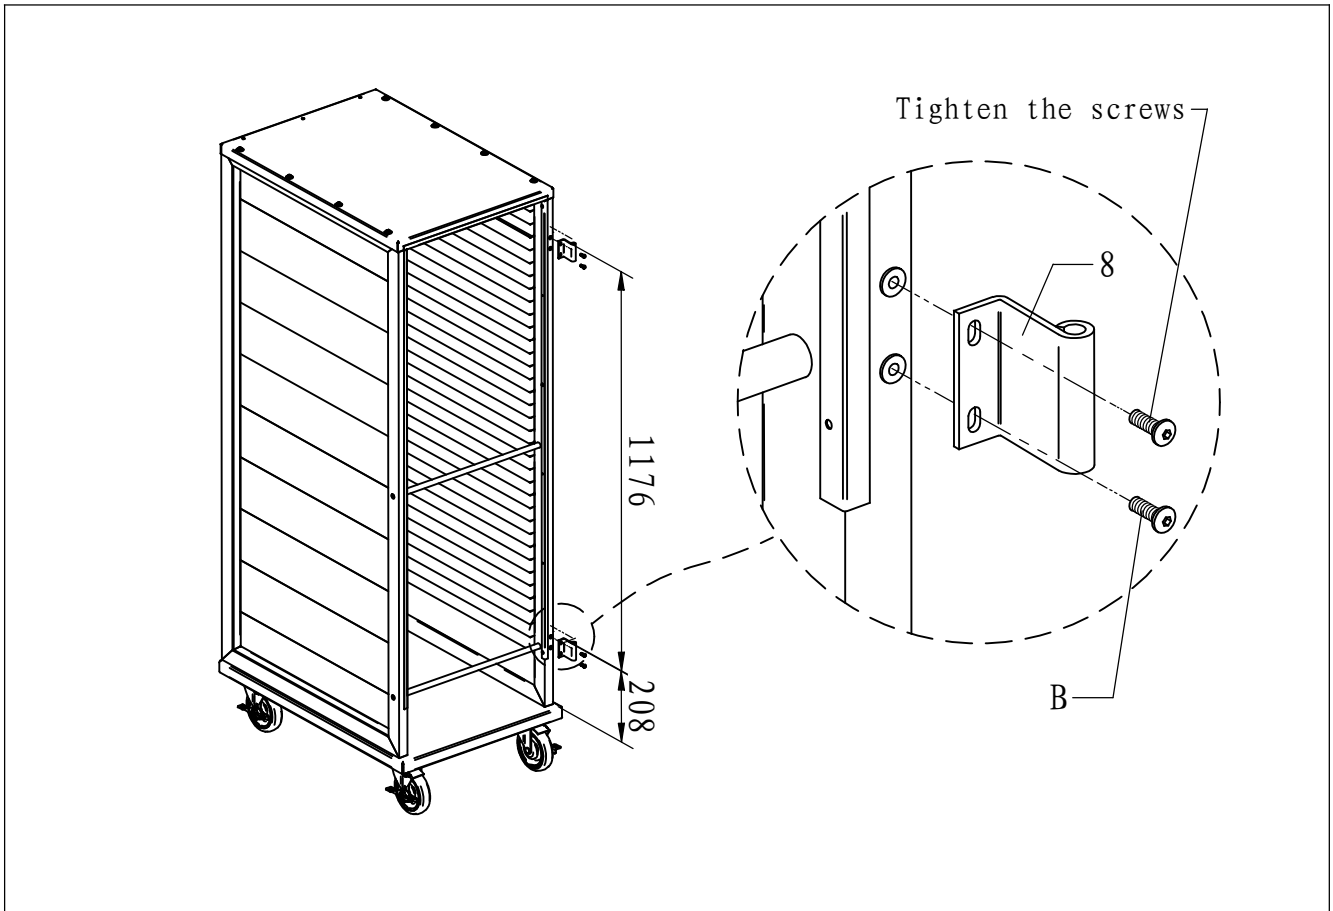 


⑨ Heater

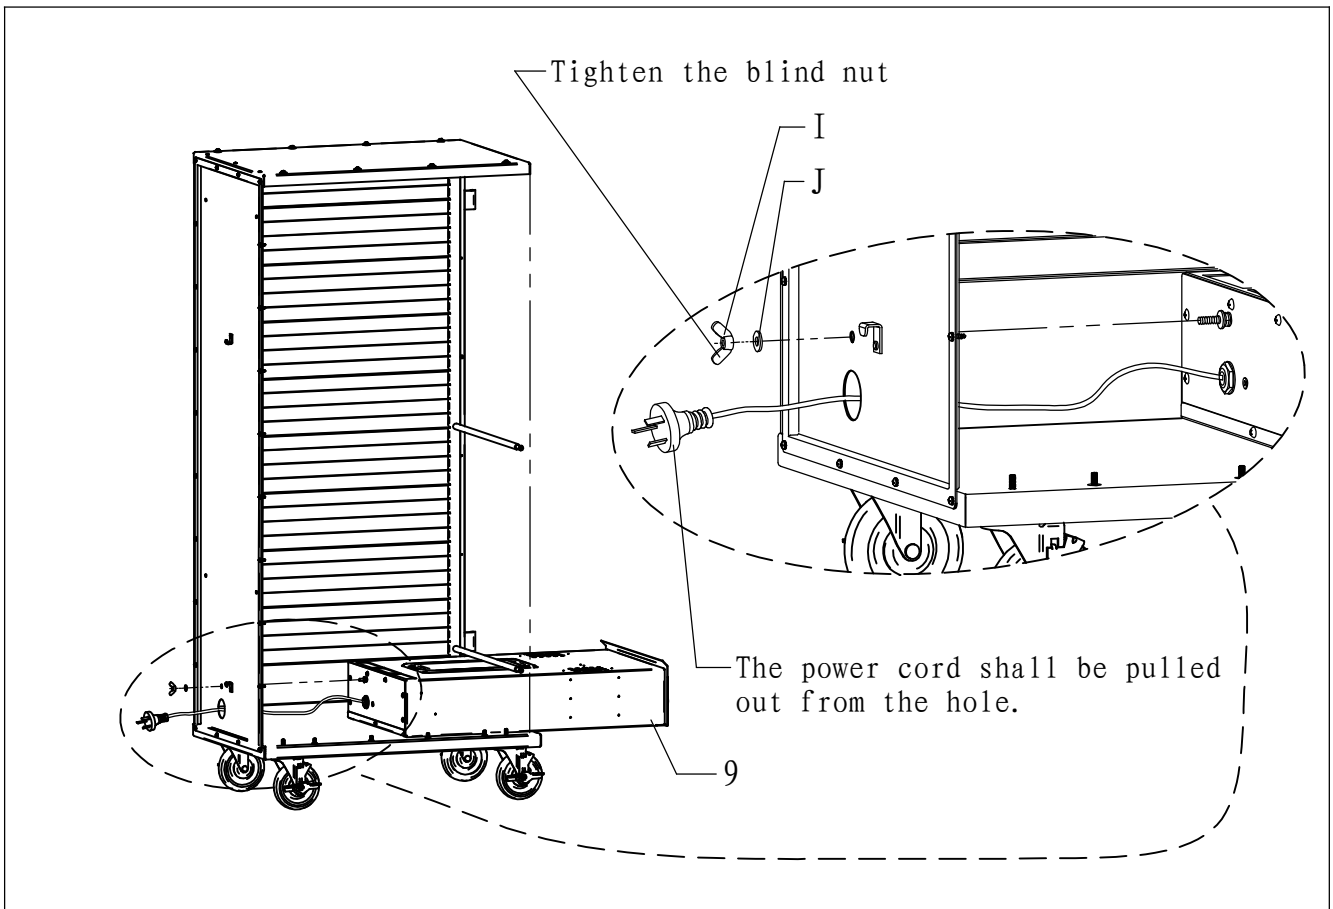 

⑩ Wind deflector

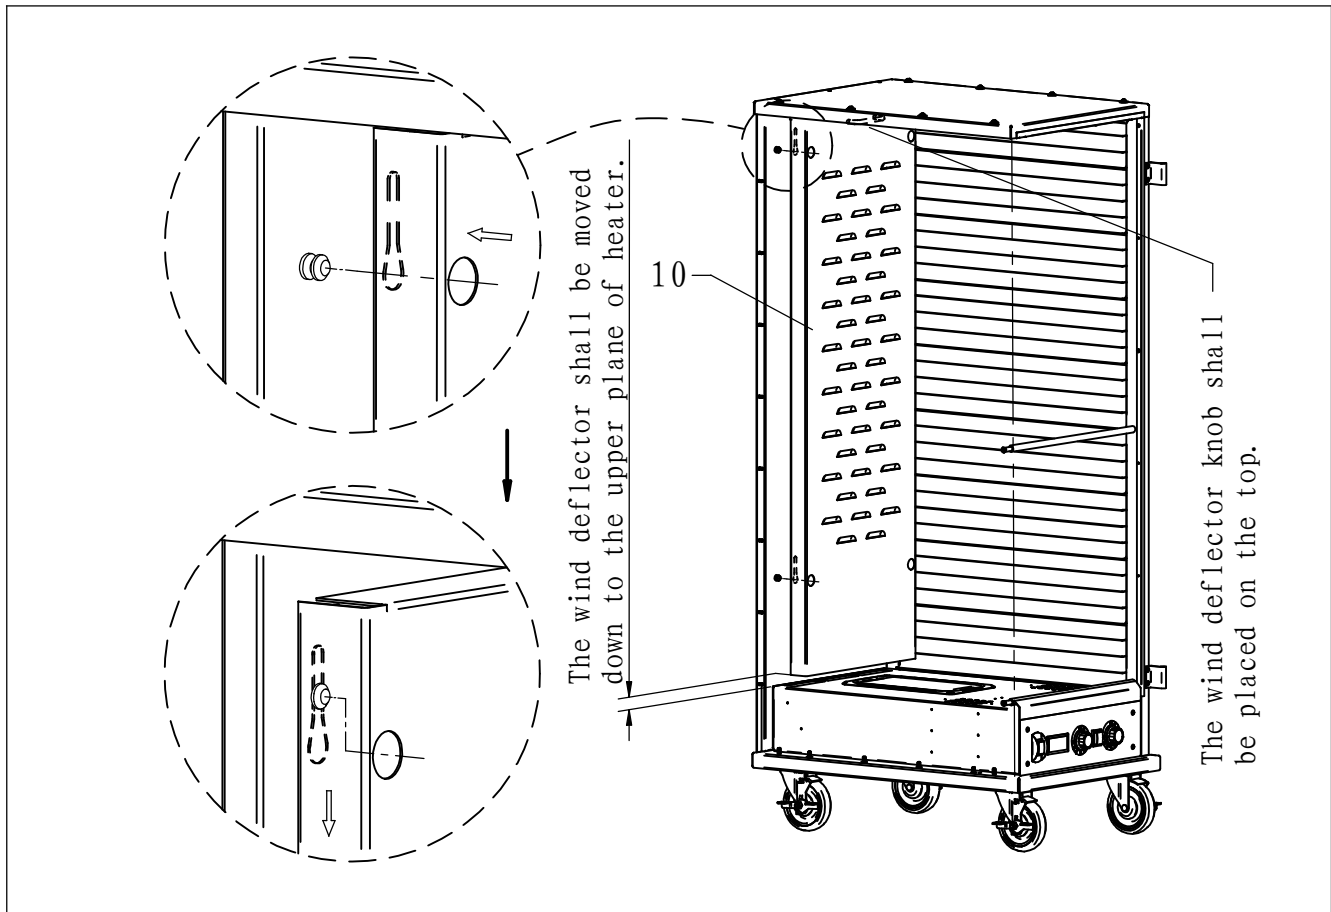 


⑪ Transparent door

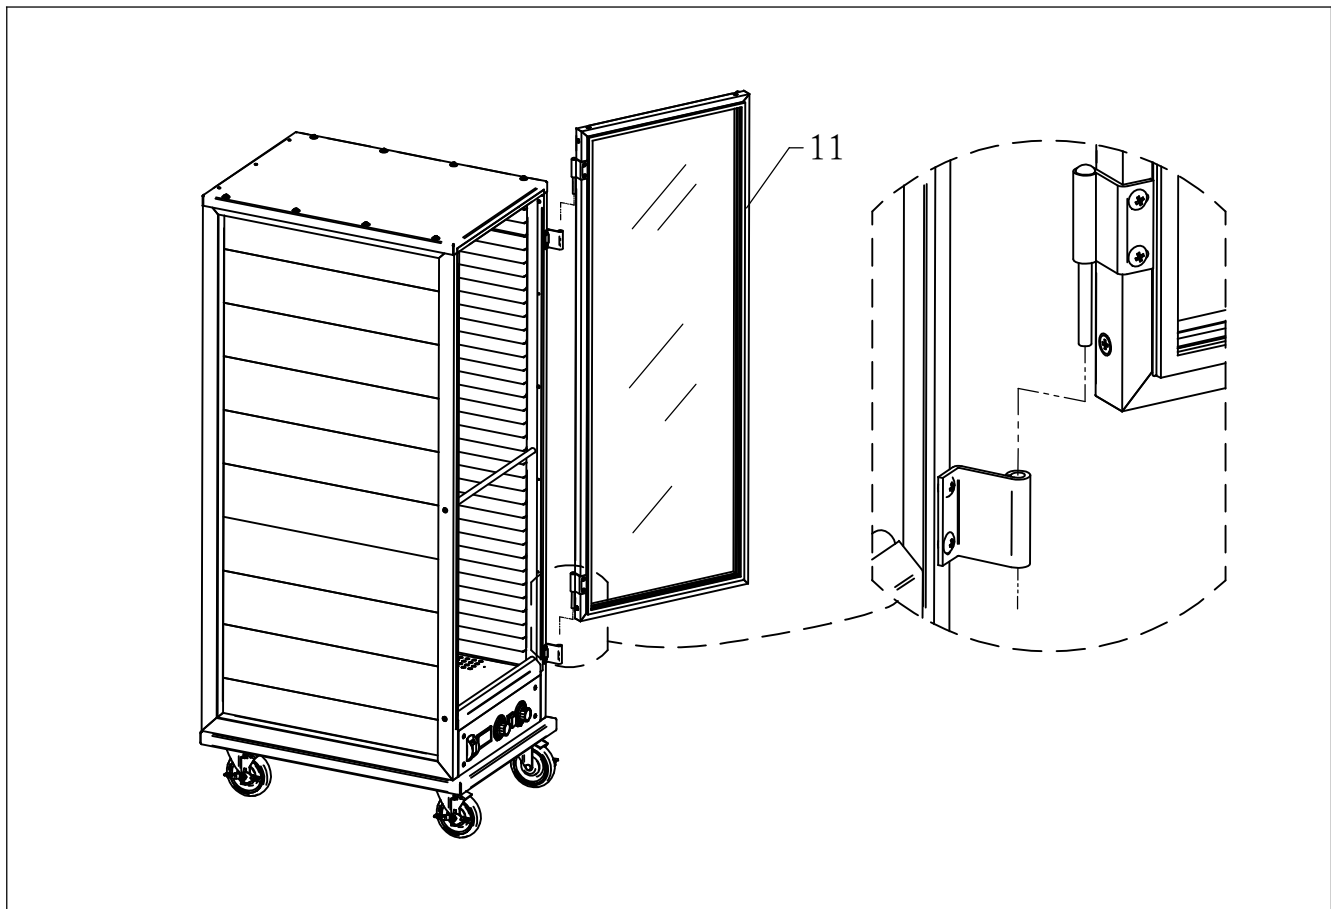 

Once assembly is completed, make sure the door closes fully and the gasket seal is airtight along door edge.

Test out the wheels for full range of motion.

 If you have any questions or issues with these instructions call Adcraft at 1-800-223-7750 Ext. 3 for technical support.

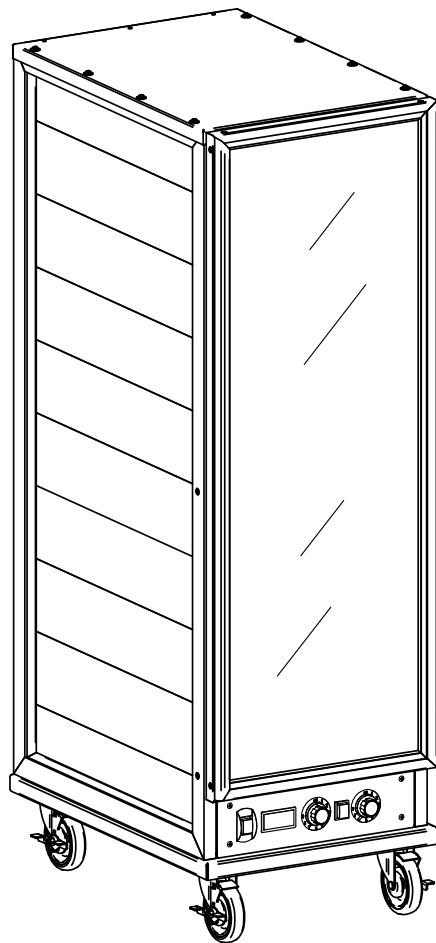

Admiral Craft Equipment Corp.
940 South Oyster Bay Rd.
Hicksville, NY 11801
P: 1-800-223-7750
F: 1-800-447-7751
info@admiralcraft.com
www.admiralcraft.com
www.admiralcraftequipment.com

ACE Equipment One Year Limited Warranty

Admiral Craft Equipment Corp. (ACE) warrants its equipment against defects in materials and workmanship, subject to the following conditions:

ACE Equipment is warranted for one year, effective from the date of purchase by the original owner. A copy of the original receipt or other proof of purchase is required to obtain warranty coverage. This warranty applies to the original owner only, and is not assignable.

Should any product fail to function in its intended manner under normal use within the limits defined in this warranty, at ACE's discretion, such product will be repaired, replaced with a refurbished unit, or replaced with a new unit by ACE, after defective unit has been inspected and defect has been confirmed. ACE does not assume any liability for extended delays in replacing any item beyond its control. This warranty does not apply to rubber and non-metallic synthetic parts that may need to be replaced due to normal usage, wear or lack of preventative maintenance.

This warranty covers products shipped into the 48 contiguous United States, Hawaii, and metropolitan areas of Alaska and Canada. Warranty coverage on products used outside the 48 contiguous United States, Hawaii and metropolitan areas of Alaska and Canada may vary. Contact ACE for details at 1-800-223-7750

The following conditions are not covered by warranty:

- Equipment failure relating to improper installation, improper utility connection or supply and problems due to improper ventilation.
- Equipment that has not properly been maintained, damage from improper cleaning, and water damage to controls.
- Equipment that has not been used in an appropriate manner, or has been subject to misuse, neglect, abuse, accident, alteration, negligence, damage during transit, delivery or installation, fire, flood, riot, or act of God.
- Equipment that has the model number or serial number removed or altered.
- Equipment on which the security seal has been broken.

If the equipment has been changed, altered, modified, or repaired without express written permission from ACE, then the manufacturer shall not be liable for any damages to any person or to any property, which may result from the use of this equipment thereafter.

This equipment is intended for commercial use only and this warranty is void if equipment is used in other than a commercial application.

For warranty and non-warranty related issues please call ACE at 1-800-223-7750 ext 3 to speak to technical support. When calling please have your model number, serial number and proof of purchase ready. To purchase replacement parts, receive online technical support or fill out a warranty claim visit www.admiralcraftequipment.com. It is not necessary to contact the place where you originally purchased your product from.

“THE FOREGOING WARRANTY IS IN LIEU OF ANY AND ALL WARRANTIES EXPRESSED OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSES AND CONSTITUTES THE ENTIRE LIABILITY OF ACE. IN NO EVENT DOES THE LIMITED WARRANTY EXTEND BEYOND THE TERMS STATED HEREIN.”