

X.SPARE PARTS OF BLENDER

x1	Agitator shaft	18	Gear	35	Self lock nut	52	Spring
2	Agitator shaft sleeving	19	sleeve	36	Front housing	53	Joint level
3	Planetary gear	20	Gear shaft	37	Spring	54	Connection rotate seat
4	spacer	21	Bevel gear	38	Bevel gear	55	Mix level
5	Pressure spring	22	Back cover	39	Sleeve	56	mixer
6	Clutch body	23	Back housing	40	Inner gear	57	agitator
7	47-gear	24	Motor rotor	41	Mixing seat	58	Activities cover
8	46-bevel gear wheel	25	Worm gear sleeve	42	Mixing seat	59	tank
9	29-small gear	26	Worm gear	43	Planetary gear	60	Fixed protection cover
10	Sleeve	27	Body	44	Transmission shaft	61	Button
11	Mesh gear	28	Shifting block shaft	45	Bottom seat	62	Switch install board
12	Upper cover	29	Shifting block	46	VAT clamp	63	Electric box
13	Transmission shaft upper cover	30	Shifting handle	47	carriage	64	Overload protection
14	Bearing bottom cover	31	Handle seat	48	Nut	65	Capacitor
15	gear	32	Eccentric sleeve	49	body	66	Relay
16	Gear	33	Front cover	50	Jiggle bar	67	Power line
17	Shaft sleeving	34	front	51	Connection pad	68	Meat mincer (only for HL-B20M)

HL-B20 /HL-B20M EXPLOSIVE PICTURE

